





# Contents

1	Quic	start	. 1
1.	1 Int	oduction	. 1
1.:	2 De	finition of the connectors	. 1
1.:	3 Vo	tage supply of the panel	. 2
1.4	4 Dir	nensions and cut-out (in mm)	. 3
	1.4.1	12.1" panel	. 3
	1.4.2	10.4" panel	. 3
	1.4.3	5.7" panel	. 3
1.	5 Ins	tallation of the panels	. 4
	1.5.1	Installation in control cabinet	. 4
	1.5.2	Drywall mounting set for MB panels	. 4
1.0	6 Op	eration and handling of the touchscreen	. 5
1.	7 Se	tting up communications for displaying a website	. 6
	1.7.1	HTTP Direct over ethernet RJ-45 connector	. 6
	1.7.2	USB port as Service port	. 7
	1.7.3	Getting started with the Web Editor on the MicroBrowser panel PCD7.D4xx	. 7
2	Tech	nical data for the two panel types	. 8
2.	1 Te	chnical data of the SVGA MicroBrowser panel	. 8
2.2	2 Te	chnical data for the pWeb panels	. 8
	2.2.1	Overview of the technical data for the pWeb panels	. 8
	2.2.2	Battery of the pWeb panel	. 9
3	Logic	controller of the programmable pWeb panel	11
3.	1 Co	mmunications interfaces	11
	3.1.1	On-board RS-485	11
	3.1.2	Additional communications ports using slot A (Port no. 1)	13
3.	2 Co	nfiguration of the hardware settings in PG5	17
	3.2.1	General information	17
	3.2.2	Running the device configurator	18
3.3	3 Fir	mware version	19
3.4	4 Do	wnloading the program and backup	19
	3.4.1	Downloading the user program with PG5	19
	3.4.2	Backing up and restoring the user program	20
3.	5 LE	D and operating status (12" pWeb panel only)	20
3.	6 So	ftware Watchdog	21
3.	7 RIO	Ds	21
4	Using	the Setup menu on the SVGA MB panels and pWeb panels	22
4.	1 Op	ening the Setup menu	22

4	.2	2 Customising the start screen		22
4	.3	Changing the password		23
4	.4	Savi	ng and exiting	23
5	St	tructu	re and description of the Setup menu	24
5	.1	Netw	vork	24
	5.	1.1	DCHP On	24
	5.	1.2	TCP/IP address	24
	5.	1.3	Subnet Mask	24
	5.	1.4	Default Gateway	24
	5.	1.5	Primary DNS Server	25
	5.	1.6	Secondary DNS Server	25
5	.2	Logi	c Controller (pWeb panels only)	25
	5.	2.1	Program Name	25
	5.	2.2	Status RUN or HALT	25
	5.	2.3	S-BUS	25
5	.3	Web	Connection	26
	5.	3.1	Connection	26
	5.	3.2	Type (no selection for pWeb)	26
	5.	3.3	Start page	26
	5.	3.4	Remote Host IP	26
	5.	3.5	Remote Port	26
	5.	3.6	Connection List	26
5	.4	Syst	em	27
	5.	4.1	Production data	27
	5.	4.2	Info	27
	5.	4.3	Settings	27
	5.	4.4	Special Settings	28
	5.	4.5	Log	29
	5.	4.6	Restart	29
5	.5	Disp	lay	29
	5.	5.1	Brightness	29
	5.	5.2	Backlight [min]	29
	5.	5.3	Rotation	29
	5.	5.4	Calibrate Touchscreen	29
5	.6	Keyt	poard	29
	5.	6.1	SIP (Virtual Keyboard)	29
	5.	6.2	Name of the first keyboard	29
	5.	6.3	Width of the Focus (in Pixels)	29

5.7	Pas	sword	. 30
5.8	Lan	guage	. 30
6 I	Local	files / local server	. 31
6.1	Con	necting via FTP access	. 31
6.2	INT	FLASH/WEBPAGES	. 32
7 1	Updati	ng and special settings	. 33
7.1	Firm	nware update	. 33
7	7.1.1	Additional information on downloading FW	. 33
7	7.1.2	Safe Firmware Download via USB	. 33
7.2	Res	et / Resetting the device to factory settings	. 33
7.3	Bac	klight	. 34
7.4	Тур	efaces supported by MB panel PCD7.D4xx	. 34
7.5	Spe	cial Unicode fonts	. 36
7	7.5.1	General information	. 36
7	7.5.2	Multi-languages: Example	. 37
7	7.5.3	Analysing incorrect fonts, font sizes or format templates	. 38
7	7.5.4	Web Editor	. 38
7.6	Inte	rnal special functions	. 38
7	7.6.1	Container variable for SVGA MB panel	. 38
7	7.6.2	uBT_BackLight Containerdiagramm	. 44
7	7.6.3	Additional uBTerminal container for "Save logs to File" function	. 44
7.7	List	of message box messages	. 44
8 I	Handli	ng: precautionary measures	. 46
8.1	Glas	ss touchscreen	. 46
8.2	Info	rmation on the LCDs of the MB panel display	. 46
8.3	Car	9	. 46
9 (	Gener	al recommendations for the Web Editor	. 47
9.1	In th	e "Project configurations"	. 47
9.2	In th	e Web Editor project (general information)	. 47
9.3	Defi	nition of an object in the Web Editor	. 47
9.4	Han	dling	. 48
9.5	Son	ne rules regarding gif images	. 48
ę	9.5.1	Decompression in the video cache at startup using the Gif list	. 48
ę	9.5.2	Decompression of Gif files in the video cache at startup using a dummy start screen	. 49
ę	9.5.3	Decompression of Gif files: analysis/calculation	. 49
9.6	Exp	anded error messages for the SVGA panel	. 50
9.7	Exte	ended alarm macros	. 50
9.8	Trei	nd macros for MB panels with "save logs to files"	. 50

Α	Appendix	53
A.1	1 Symbols	53
A.2	2 Address of Saia Burgess Controls	53

### **Document versions**

Version	Publication	Changes	Comments
EN01	2012-10-10		First version of manual
EN02	2012-11-28	HaMa	Ch1.2 Connection SD $\rightarrow$ D and /SD $\rightarrow$ D Ch3.1.1 Picture RS-485-Network replaced
EN03	2013-12-18	ErDa	Chapter 7.6.2 Container variables removed
EN04	2013-05-31	HaMa	Chapter 3.1.2 Descritption oft the communication modules PCD7.F1xxS for Slot A
EN05	2014-01-20	HaMa	New logo and new company name

## Trademarks

Saia PCD® and Saia PG5® are registered trademarks of Saia-Burgess Controls AG

Technical modifications and changes depending on state of the art. Saia-Burgess Controls AG, 2011. © All rights reserved

## 1 Quickstart

### 1.1 Introduction

This manual covers the technical aspects of the PCD7.D412DTPF SVGA MB panel and the PCD7.D4xxxT5F programmable pWeb panel. The aim of the Quickstart chapter is to facilitate the rapid installation of components of the PCD7.D4xxxT5F. The following are discussed:

- Definition of the connectors
- Power supply and consumption
- Dimensions
- Possible communications modes

In other chapters, more details can be found about:

- Hardware
- Software (Setup menu step-by-step and configuration)
- Usage, firmware update, etc.
- Maintenance

### Complementary manuals:

- PG5 2.0 User guide | 26/732
- File System and FTP Server | 26/855
- Ethernet TCP/IP | 25/766
- Smart RIO PCD3.T665 | 25/892
- PCD3 series (configuration of the communications interfaces) | 26/789

### 1.2 **Definition of the connectors**



Signal

RS 485

GND

SD

/SD

GND

Signal

RS 232

TXD232

RXD232

RTS232

CTS232

DTR232

DSR232

COM232

DCD232

GND

GND

### Connections

Power Supply

·····				
12	Connector	Signal		
<u></u>	pins			
믯믯	1	24 V (+)		
	2	GND (-)		

RS 485

1	3
	A
믭	旧
믯	믯
2	4

Connector pins	Signal
1	GND
2	NC
3	/D
4	D

Power supply Communications Reset button

Earth (-) / 24V (+) 2x Ethernet (switch !) USB Pushbutton

PCD7.F1xxS

0

86420

 $\overline{}$ 

0000

97531

### Connector, 2-pole 2x RJ-45 with LED indicator Standard USB slave

Connector

0

1

2

3

4

5

6 7

8

9

pins

#### 1.3 Voltage supply of the panel

1 2	Pin	Signal
6A	1	24V (+)
	2	Earth (-)

#### **Current supply:**

→ 24 VDC+30% / -20%

or

→ 19 VAC±15% current supply with full-wave rectifier

	Current consumption:	Power output without back- light
PCD7.D412DT5F	Max 600 mA	5 W
PCD7.D410VT5F	Max 600 mA	5 W
PCD7.D457VT5F	max 500 mA	5 W
PCD7.D412DTPF	Max 600 mA	5 W

Current supply with jack plug for cable of max. 1.5 mm<sup>2</sup>.

### 1.4 Dimensions and cut-out (in mm)

#### 1.4.1 12.1" panel



#### 1.4.2 10.4" panel







### 1.5 **Installation of the panels**

#### 1.5.1 Installation in control cabinet

- The installation position is horizontal. Slide the unit into the installation cut-out.
- Make sure that the ventilation slots (top of unit and both sides)
- Are clear of any obstructions to allow air circulation.
- Install the 4 (or 6 on the 10.4" and 12.1") mounting brackets (2 on top of the unit and 2 on the bottom or 2 on the sides on the 10,4" and 12"). Refer to the photo below.



Mounting parts of 10.4" and 12.1" panels



Mounting parts of 5.7" panels

#### Note:

- It is helpful to have somebody hold the unit from the front side of the panel while the brackets are being installed.
- The bolts require a 2.5 mm Allen key.
- Screw the bolts into the brackets up to the point when you can still clip them onto the MicroBrowser, without being obstructed by the plate.
- Clip them onto the unit then tighten the bolts until they touch the plate.
- The bolting torque should not exceed 4 Nm.

#### How to ensure spray water protection according to IP65:

→ The device must be mounted on a flat surface or wall. Tighten the bolts until the front plate of the PCD7.D4xx is just touching the mounting surface/wall.

#### 1.5.2 Drywall mounting set for MB panels

The MicroBrowser panels are not just for mounting in the control cabinet; They also look very good in the office or living room, or mounted on a wall. This is why we provide wall mounting kits for solid and cavity wall mounting.



Mounting kit for the 5.7" MB panel:	PCD7.D457-OWS2 (solid walls) PCD7.D457-IWS2 (cavity walls)
Mounting kit for the 10.4" MB panel:	PCD7.D410-OWS2 (solid walls) PCD7.D410-IWS2 (cavity walls)
Mounting kit for the 12.1" MB panel:	PCD7.D412-OWS2 (solid walls) PCD7.D412-IWS2 (cavity walls)

### 1.6 **Operation and handling of the touchscreen**

To operate the touchscreen, use only your finger, the stylus or a soft finger stylus. Do not use sharp tools (e.g. sharp metallic objects, paperclips or a screwdriver, etc.)





### 1.7 Setting up communications for displaying a website

### 1.7.1 HTTP Direct over ethernet RJ-45 connector

The quickest communications port is the ethernet port via RJ-45, with the HTTP Direct protocol selected. The speed is either 10 MBit/s or 100 MBit/s after an auto-negotiation protocol with the connected device.

#### Internal connection for programmed pWeb panels

The programmed panels are connected internally directly to the programmable logic controller, via an ethernet connection. It therefore suffices, in this case, to simply set the local host IP address 127.0.0.1 and HTTP Direct connection in the Setup menu under Web connection. The programmable pWeb panels are obviously also capable of displaying websites from controllers located within the network. The procedure for this is the same as with the standard 12" SVGA panel.

#### **Connecting to external devices**

The HTTP connection can be established between our PCD7.D4xx and any SBC controller, if an ethernet connection to an Automation Server exists. In the case of the programmable panels, the panel is generally connected to the internal controller.



#### Quick test of the SVGA panel

- First the Saia PCD must have a web program loaded, which was created with the Web Editor (see 26-838\_Manual\_Web-Editor). You can ask the SBC Support Team for some examples. They will also soon be available on our website.
- Using a CAT5 cable, you can connect our PCD7.D4xx terminal to the SBC device. The current controllers support auto-crossing, so that a crossover cable is no longer required.
- Using PG5, define the **HW settings of the Saia PCD** device: S-bus support must be selected together with the TCP/IP channel where a valid IP address is entered.

#### Setup settings of the SVGA panel:

Configure the SVGA panel by opening the Setup menu (refer tochapter 5):

- → First, be sure that you are on the same network subnet. For example, If the Saia PCD has the IP address 192.168.12.92, give your terminal (in the Network menu) an IP address like 192.168.12.90, as normally the subnet mask is set to 255.255.255.0.
- → In the Configuration menu, enter the Address of the start pagethat corresponds to the IP address of the Saia PCD, and also enter its HTML start page name.

Now your MB panel should be connected to the Saia PCD and the start page selection should be displayed on the screen. You can now navigate your web pages.

#### 1.7.2 USB port as Service port

The USB port on the programmable panels is mainly used to download the user program onto the controller with PG5.

On SVGA standard MB panels, this port is generally used as a Service port. It is mainly used to download new firmware programs onto the device.

The USB port meets the USB 1.1 specification. Maximum speed: 12 MBit/s.

#### 1.7.3 Getting started with the Web Editor on the MicroBrowser panel PCD7.D4xx

Detailed documentation can be downloaded from our website. See manual 26-838 Manual Web Editor. To get started with programming the MB panel, **some particular features** must be observed:

- If no assistance is available from the Wizard when creating a new project, the project must be set up as follows:
- Using the virtual keyboard with SVGA MB panels See Chapter 5.6Keyboard
- If you want to use the file Background.teq or foreground.teq, you first need to generate these files. Why is this? Before objects or text and fields can appear, these files must first be positioned on each page.
- Once the project is ready to download, enter the desired HTML file name and generate a Build Project. Then make a Webserver Build in the Saia PG5 Project Manager, so that all the files are held in the PCD. If you just want to access the PCD with MB panel PCD7.D4xx and not with a PC browser, you can reduce the amount of data, by deleting the .jar files, as they are already included on the panel.

## 2 Technical data for the two panel types

The hardware of the SVGA MicroBrowser panels and the programmable pWeb panels is differentiated in several areas by the Programmable Logic Controller on the pWeb panels. These are described in the following sections

## 2.1 Technical data of the SVGA MicroBrowser panel

Display Display size Resolution Backlight Colours Contrast adjustment On Board File System	12.1" TFT SVGA 800x600 LED 65536 Yes 128 MByte
Operating system	Saia PCD COSinuS with SBC MicroBrowser expansion
Internet services:	Automation Server, SBC MicroBrowser
Interfaces: Ethernet 10 / 100 M	2x RJ45 (switch)
Current consumption	Max 600 mA
Voltage supply	24 VDC±20 %
Protection class (front)	IP65
Temperature range:	Operation: 0 to 50°C Storage: -25 to +70°C
Relative humidity:	Operation: 10 to 80% Storage: 10 to 98% (non-condensing)
Processor:	Coldfire CF5373L, 240 MHz
Real Time Clock (RTC)	Yes, with Supercap

## 2.2 Technical data for the pWeb panels

### 2.2.1 Overview of the technical data for the pWeb panels

Logic controller:	
User program, ROM /DB/text	1 MByte
RAM/DB/text	1 Mbyte
Media	14,336 flags / 16,384 registers
Backup for user	User program is saved to the integrated micro SD card
File system for user	128 MBytes, on-board
Program cycle time	10 cycles / sec maximum
Protocols on field level:	Serial-S-bus, Ether-S-bus, Ether-S-I/O, Modbus RTU or TCP, M-bus
Internet services:	SBC MicroBrowser, Automation Server
Interfaces:	
Ethernet 10 / 100 M	2x RJ45 (switch)
USB (1.1 / 2.0)	1x client
Serial interfaces	RS-485& socket for PCD7.F1xxS communications module
Temperature range:	Operation: 0 to 50°C
	Storage: -25 to +70°C
Relative humidity:	Operation: 10 to 80%
	Storage: 10 to 98% (non-condensing)
Processor:	Coldfire CF5373L, 240 MHz

#### Real Time Clock (RTC):

Battery:

Lithium Renata CR 2032 (lifetime 1-3 years)

Yes, with battery back-up

Technical data	PCD7.D457VT5F	PCD7.D410VT5F	PCD7.D412DT5F
Display size	5.7 TFT	10.4 TFT	12.1 TFT
Resolution/Pixels	VGA 64	0 x 480	SVGA 800 x 600
Touchscreen	Resistive	four-wire	Resistive five-wire
Contrast adjustment	yes		
Backlight	LED		
Voltage supply	18 - 32V		
Current consumption	Max. 500 mA Max. 600 mA		
Protection class (front)	IP 65		
Front status LED	No	No	yes

#### 2.2.2 Battery of the pWeb panel

The hardware components are maintenance-free, with the exception of the CPUs for the pWeb panel, whose battery requires occasional replacement.

The components do not contain any user-replaceable parts. If hardware problems occur, please return the components to Saia-Burgess Controls.

The resources (register, flags, timer, counters, etc.) and the character strings/DBs are stored in the RAM. In order to prevent these from being lost, and to enable the hardware clock to carry on running during a power failure, the devices are equipped with a back-up battery:

CPU model	Buffer	Buffer time
PCD7.D4xxx	Renata CR 2032	1-3 years1)
	lithium battery	

<sup>1)</sup>Depending on the ambient temperature: the higher the temperature, the shorter the buffer time



New controllers include batteries in the scope of delivery, and these must be inserted during commissioning. Pay attention to the polarity of the batteries.

CPUs with lithium batteries are not maintenance-free. The battery voltage is monitored by the CPU. The status LED lights up (12" pWeb panel only) and XOB 2 is called if:

- the battery voltage is lower than 2.4 V
- the battery is missing

We recommend changing the batteries while the panel is connected to the power supply, in order to avoid data loss.



- Disconnect from the voltage supply
- Remove the cover of the pWeb panel
- Reconnect to the voltage supply, in order to prevent data loss while changing the battery
- Push the terminal holder back slightly (see arrow in figure)
- Remove the battery
- Insert a Renata CR 2032 button battery, so that the positive terminal is in contact with the terminal holder.
- Disconnect from the voltage supply and reattach the back wall of the panel

## 3 Logic controller of the programmable pWeb panel

### 3.1 **Communications interfaces**

Various communications interfaces are integrated into the programmable logic controller. These can also be expanded by installing an additional module.

### 3.1.1 On-board RS-485



The pin n°s of the connected PCD are explained in the respective manual.

#### Make sure that the terminators are properly terminated.

In the example below, you can see a possible connection between the terminals and PCDs. In order to avoid reflection on the communications channel, the network should be terminated with termination resistors. The PCD7.D4xx has a switch for this:



The following figure shows you where it is located.

- $\rightarrow$  If the switch is in the **top position**, the network is **closed**.
- $\rightarrow$  If the switch is in the **bottom position**, the network is **open**.

RS-485 switch

**End Termination Switch** 





Configuration can either be performed directly, via the Setup menu on the pWeb panel, or via the Hardware configuration on the PG5. Overwrite the current configuration the same as when making a change.

### 3.1.2 Additional communications ports using slot A (Port no. 1)

Slot A on the pWeb panels allows you to plug in optional modules for communications interfaces. Only modules of the PCD7.F1xxS series are supported.

### 3.1.2.1 PCD7.F110S Serial Interface Module RS-485/RS-422

Termination resistors can be connected (CLOSED) or disconnected (OPEN) with slide switchs.

closed

<sup>D</sup> PCD7.F110S

#### RS485 termination







<u>Open</u>, not terminated, open (factory setting)

Close, terminated,

8	6	4	2	0
	Ž	Ž	ζ	Ŋ
	0	0	0	
l G		ī		n
E	띳	믓	띗	늬
9	7	5	3	1

### Pin assignment:

Pin-Nr.	RS485
0	PGND
1	Rx-Tx
2	/Rx-/Tx
3	
4	
5	PGND
6	
7	
8	(SGD)
9	

Terminal block, socket X2	Bus-Cable	
	GND	
PGND -	Bus RS 485	PGND
/RX - IX —	Bus RS 485	
/////		

Pin-Nr.	RS422
0	PGND
1	Тx
2	/Tx
3	Rx
4	/Rx
5	PGND
6	RTS
7	/RTS
8	CTS
9	/CTS



For more details see in the Manual 26/740, Installation components for RS-485 Networks.

### 3.1.2.2 PCD7.F121S Serial interface module RS-232 suitable for modem connection

## PCD7.F121S





### Pin assignment:

Pin-Nr.	RS232
0	PGND
1	TxD
2	RxD
3	RTS
4	CTS
5	PGND
6	DTR
7	DSR
8	COM
9	DCD

Terminal bloc socket X2	k, Cabl	e Peripher (DTE)	al D-Sub 9 pol. (e.g. PC	f D-Sub m 25 pol. C) (e.g. PC)
PGND		PGND		
TXD		TX	3	2
RXD		N RX	2	3
RTS		RTS	7	4
CTS		CTS	8	5
PGND		SGND	5	7
DTR	$\sim$	DTR	4	20
DSR		DSR	6	6
Reserve				
DCD		DCD	1	8

### 3.1.2.3 PCD7.F150S Serial Interface Module RS-485with Electrical Isolation

Electrical isolation is achieved with three optocouplers and a DC/DC converter. Data signals are protected against overvoltage with an anti-surge diode (10 V). Termination resistors can be connected (CLOSED) or disconnected (OPEN) with slide switchs.

closed

PCD7.F150S

RS485 termination



<b>_</b>	0	<u>о</u>	2
N	-	,	
_ /			
	_ [ 2 [ e	-^ <sup>○</sup> 2 e	• • • • • • • • • • • • • • • • • • •



<u>Open,</u> not terminated, open (factory setting)

Close, terminated,



Pin assignment:

Pin-Nr.	RS485
0	PGND
1	Rx-Tx
2	/Rx-/Tx
3	
<sup>*</sup> <sup>□</sup> 4	
5	PGND
6	
7	
8	(SGD)
9	

RX - TX Bus RS 485 /RX - /TX Bus RS 485 /RX - /TX



Use of this module will reduce the allowed ambient temperature of the operating system about 5 °C.

For more details see in the Manual 26/740, Installation components for RS-485 Networks.

### 3.1.2.4 PCD7.F180S Serial Interface Module Belimo MP-Bus

Up to 8 actuators and sensors can be connected.

#### PCD7.F180S



## Pin assignment:

Pin-Nr.	Belimo MP-Bus
0	GND
1	MP
2	,MFTʻ
3	,INʻ
4	
5	GND
6	
7	
8	
9	

0	GND	Ground connection, MP line							
1	MP	Multi Point							
		The MP-Bus is the Belimo master-slave bus. On a master device, up to 8 slaves can be connected.							
		These are:							
		<ul> <li>MFT (2) actuators</li> </ul>							
		<ul> <li>MFT (2) valve actuators</li> </ul>							
		<ul> <li>MFT-fire damper actuators</li> </ul>							
		<ul> <li>VAV-Compact controller NMV-D2M</li> </ul>							
2	,MFT'	MFT programming unit (MP-Bus internal)							
3	,IN	MFT programming unit detection (input 10 kΩ, Z5V1)							
5	GND	Ground connection, MFT programming unit							

### 3.2 Configuration of the hardware settings in PG5

Configuration of the programmable panel is usually performed via PG5, which is also used to generate the project. However, it can also be configured directly on the panel, using the Setup menu described in Chapter 5.2.

### 3.2.1 General information

The following description assumes that the user is familiar with the PG5 software. If this is not the case, we recommend reading the manual 26/733 "PG5, software requirements, PG5 V 2.0" The device configurator defines direct access to programming instructions, for reading values from the peripheral input module and writing values to the peripheral output module.

#### 3.2.2 Running the device configurator

The device configurator is used for hardware configuration, setting up logs, and I/O handling

Double click on the project tree icon to start the device configurator



Use a right click to select the Device and use Change Device Type to set the panel which is to

be configured. The Download button <sup>St</sup> can be used to download the configuration onto the pWeb Panel.

Device				
Туре	De	escription		
PCD7.D41 <sup>017</sup>	TEE ID.	ogramable Miero	Dronnoor Dr	nel, 10" display.
MomonyS	Change	e Device Type		
Memory	Cut		Strg+X	
Slot Typ	Сору		Strg+C	
M1	Paste		Strg+V	
Onboard	Insert         Strg+I           Location         Delete         Entf           Onboard         Move up         Strg+U           Onboard         Move down         Strg+D		Strg +I	
Location			Entf	
Onboard			Strg+U	eral-purpose communications (Terminal block).
Onboard			Strg+D	s port, PGU or general-purpose.
Onboard	Propert	ies		ings, DHCP.
SocketA	sketA			]
Ethernet Prot	tocols			
Section		Description		
IP Transfer Protocols FTP, HTTP Direct Protocol		ct Protocol	ls, ODM.	
IP Protocols DNS, SNTP, SNMP protoco			MP protoc	ols.
HTTP Portal	HTTP Portal HTTP Portal Communicati			on For PCD Over Private Network.

### 3.3 **Firmware version**

The firmware of the programmable panel is stored on an SD card soldered to the motherboard. A firmware update can be applied by downloading a new version with the PG5. When doing so, pay attention to the following procedure:

- Open<u>www.sbc-support.com</u> and download the latest firmware version
- Establish a connection between PG5 and the CPU, the same way as when downloading an application (in accordance with the available devices, serial with PGU cable, modem1), USB, ethernet)
- In the Tools menu, select "Update Firmware" and use the Browse function to select the path for the file with the new firmware version. Make sure that only one file is selected for download
- Start the download

### 3.4 Downloading the program and backup

The user program is downloaded to the pWeb panel in the same way as performing device configuration with the PG5 software. This process is described below.

### 3.4.1 Downloading the user program with PG5

1	Create and compile the	e user program				
	The file your_project.pc mation: User program (FUPLA, Configuration files (in so Data for first initialisatio	ed contains the following infor- IL, etc.) ome cases) n	File     Ed       File     Ed       Project 1	AA [Device1] - it <u>Vi</u> ew Pro <b>I</b> E I I ( Ire	Project Manager \$2.0 ject Device Online Tools	
2	Program download					
	Clicking on the Download button shows the following window.			After Download Pun the program Stay in Stop time Initialization Data (T C) Duts	Badus To Flash Badus to Orboard Flash Delete badus Prono Orboard Flash Badus to Flash Card Default (by Printly - see Helb) Flash Flash Delete old badus from All Flash Cards Advanced >>	
3	Options after download	d				
	Execute program (RUN)	Sets the PLC to RUN, once the download is successfully completed	Before Download Stay in Run Hait the PCD Options	After Download Run the program Stay in Stop	Backup To Flash Backup to Orboard Flash Detets backup from Corboard Flash Backup to Flash Card Default (by Priority - see Help) *	
	Remain STOPPED	remains STOPPED	Clear Media (R F	TC) NAS	File Format (.sbuk) Image Format      Delete old backups from All Flash Cards      Advanced >>	



- It is not possible to only download those blocks which have been modified.
- The user program is downloaded into the on-board memory in a file and, after a restart of the system, the process is complete.
- If the download is not successfully completed, the FW deletes all files inside
- the system folder.

Once the download has been successfully completed, start the controller:

After the system restart, the user program and ROM DB/text are transferred into the execution memory. This is a write-protected memory, which does not need to be backed up; all data is stored in the pWeb panel file system.

The data for the user program is transferred to the execution memory after the pWeb panel device starts up.

#### 3.4.2 Backing up and restoring the user program

#### Backup with PG5

Select a backup with "Backup To Flash"

<u>File Edit View Project D</u> evice	<u>0</u> nl	ine <u>T</u> ools <u>H</u> elp	
: D 📂 🕼 🖆 🔛 📥 🗐 🌆	<b>U</b> ;	<u>G</u> o Online F9	
: 🖳 🍖 🕐 🌑   🐺 🎇 🕰		Online Settings	
Project Tree	C	<u>R</u> un F10	
		Stop F12	
Properties		R <u>e</u> start F8	
TCP/IP Settings Table	₽}	Download <u>P</u> rogram	
Common Files		Download <u>C</u> onfiguration	
Library Manager		Download Changed RIO Files	
Properties		Download in R <u>u</u> n	
		Program Information	
Device Configurator		Compare Program	
Build Options		Elash Memory	Packup To Elach
Englishing Files			Bestore From Flach
Documentation Files			Restore From Frash
🗄 🚼 Ethernet Smart RIO Network			Delete Backups From Flash
			Backup Source <u>T</u> o Flash
			Restore Source <u>F</u> rom Flash
			Flash Explorer

Since the user program is already stored in the on-board flash memory, only the RAM DB/text for the on-board flash memory are stored to the folder PLC\_SYS (not visible to the user)

Note: Registers, flags, timers and counters are not stored.

During a restore, the DB/text are copied back into the SRAM memory.

#### Backup to INTFLASH file system

The values RAM DB/text are stored in the internal PCD\_Backup folder. This allows the backup files to be accessed via the FTP server and then uploaded to a PC.

### 3.5 LED and operating status (12" pWeb panel only)

The CPU is capable of the operating statuses listed in the following table. On the 12" pWeb panel, the status is indicated by a multicoloured LED. On the other panels, the status can be shown on the display.

Status	Description	LED
No power	No power connected	aus
Run	Normal processing of the user program after startup.	green
Run (conditional)	Conditional Run status A condition has been set in the debugger (Run until), which has not yet been	greengreengreen
Run with error	The same as Run, but with an error message	green
Run (conditional) with	The same as Run (conditional), but with an error	greengreengreen
Stop	<ul> <li>The status Stop occurs in the following cases:</li> <li>Downloading with the option "Remain in Stop status"</li> </ul>	red
	PGU stopped by programming unit	
Stop with error	The same as Stop, but with an error message	red

Halt	The status Halt occurs in the following cases:	red
	Halt instruction processed	
	Serious error in the user program	
	Hardware fault	
	No program loaded	
	<ul> <li>No communications mode on the S-bus PGU or Gateway Master Port</li> </ul>	
System diagnostics		
Battery fault in Run	Flashes at interval of 500ms	<mark>orange</mark> green <mark>orange</mark> green
Battery fault in Run conditional		<mark>red</mark> green <mark>red</mark> green
Battery fault in stop / halt		redred
No SD memory card		<mark>red</mark> bluegreen <mark>red</mark> blueg- reen
SD memory card but		<mark>red green</mark> blue <mark>red green</mark>
no firmware		blue

### 3.6 Software Watchdog

The pWeb panels have a Software Watchdog, which is a self-monitoring function of the processor which restarts the CPU in the event of a malfunction or loop. The core of the Software Watchdog is the instruction SYSER K 1000. The first time this is output, the Watchdog function is activated. This instruction must then be output at least every 200 ms, otherwise the Watchdog is triggered and the controller restarted.

Instruction:	SYSWR	K 1000 ; Software Watchdog instruction
	R/K x	; Parameters according to following table

; K constant or entered value; Register

- x = 0 The Software Watchdog is deactivated
- x = 1 The Software Watchdog is activated; if the instruction is not repeated within 200 ms, a cold start is performed
- x = 2 The Software Watchdog is activated; if the instruction is not repeated within 200 ms, XOB 0 is called, then a cold start is performed

#### XOB 0 calls are entered in the PCD History as follows:

«XOB0WDOGSTART» if XOB0 was triggered by the Software Watchdog

«XOB0STARTEXEC» if XOB0 was triggered by a supply fault

#### 3.7 **RIOs**

PCD3 Smart-RIO T66x modules can be used for decentralised expansion via ethernet (see also manual 26/892):

## 4 Using the Setup menu on the SVGA MB panels and pWeb panels

This chapter describes the menu structure of the SVGA MicroBrowser panel and programmable pWeb panel

### MicroBrowser SVGA panel

• PCD7.D (12.1" SVGA)

### Programmable pWeb panels (firmware 1.19.34):

- PCD7.D412DT5F (12.1" SVGA)
- PCD7.D410VT5F (10.4" VGA)
- PCD7.D457VT5F (5.7" VGA)

## 4.1 **Opening the Setup menu**



To call up the Setup menu:

- → Touch any area on the screen (except the buttons) for 4 seconds at any time
- $\rightarrow$  Touch the icon displayed during startup (see section 5. TITLE
- $\rightarrow$  The SETUP menu also contains an ONLINE help function (touch the Help icon)

## 4.2 Customising the start screen

The title screen is displayed for a few seconds, immediately after the panel is switched on with ON. The greeting and welcome screen can be defined under  $\rightarrow$  System / Intro Screen (see section 7.3.2.3)



Animated icon for "Please wait, data loading"
 User-defined start page: see section 7.3.2.3

### 4.3 Changing the password

MB panels of the PCD7.D4xxxx series are supplied <u>without</u> a password on the Setup menu. If, however, access to the Setup menu is subsequently restricted with a password, the correct password must be entered, and then confirmed with OK.

 $\rightarrow$  For information on entering passwords, see section xx

### 4.4 Saving and exiting

	s	ave change	:s	
Some ch	nanges req Wha	uire a reboot to t do you want to	become effectiv do?	/e!
	×	<b>M</b>	(a)	

If you have changed one or more parameters, you must confirm if you want to save the changes, to save & reboot, or to reset the new parameters without saving.

## 5 Structure and description of the Setup menu

The Setup screen is the first screen which is displayed when the Setup menu is accessed.

<	Back to application	Setup		
	Network	>		
	Logic Controller	>		
$\bowtie$	Web Connection	>		
	System	>		
	Display	>		
Ø	Keyboard	>		
	Password	>		
1	Language	>		
1	Network	MB panel settings	See section	5.1
2	Logic Controller	Configure the internal logic controller	See section	5.2
3	Web Connection	Configure the web connection	See section	0
4	System	Info/Settings/Special Settings/FW download & Reboot	See section	0
5	Display	Display settings	See section	
6	Keyboard	Virtual keyboard	See section	
7	Password	Enter a password	See section	5.7
8	Language	Selection of the language (E, G, F, I and Dutch)	See section	
9	Back to application	Back to application		

### 5.1 Network



This is where you can configure the network settings for the panel. Depending on the network, the connection may also work without setting a gateway or DNS server. You can exit the menu using the Setup button



On pWeb panels, the network configuration is generally performed using the PG5 device configurator. If the Device Configuration is updated via PG5, the data set in Setup is overwritten. If you want this data to be carried over to the PG5, the configuration requires the configuration file to be uploaded into the PG5 project.

### 5.1.1 DCHP On

If DCHP is off, an IP must be set by the user. Otherwise all the necessary settings are acquired by the DCHP server.

#### 5.1.2 TCP/IP address

IP address of the panel

#### 5.1.3 Subnet Mask

Subnet mask of the network on which the panel is located

#### 5.1.4 Default Gateway

IP of the standard gateway

### 5.1.5 Primary DNS Server

IP of the primary DNS server

#### 5.1.6 Secondary DNS Server

IP of the secondary DNS server

### 5.2 Logic Controller (pWeb panels only)



Settings of the programmable logic controller in pWeb panels. The settings configured here can also be made in the PG5 Device configurator.



If the Device Configuration is updated via PG5, the data set in Setup is overwritten. If you want this data to be carried over to the PG5, the configuration requires the configuration file to be uploaded into the PG5 project.

#### 5.2.1 Program Name

Displays the name of the loaded PG5 project

#### 5.2.2 Status RUN or HALT

Displays the status of the logic controller

#### 5.2.3 S-BUS

Configuration of the S-bus of the internal logic controller

#### → S-Bus Station

S-bus station of the logic controller

#### → Serial

Settings for the serial S-bus connection

o Active

Activates the serial connection

o PGU

When PGU is activated, the panel can be programmed via the serial interface

- o Port
  - For setting the S-bus port
- o Mode
  - Data or parity
- o Baud reate
  - Speed of the S-bus

#### o TS Delay

Sets a transmission delay. Setting 0 causes the default values to be used

o TN Delay

Sets a transmission delay. Setting 0 causes the default values to be used

#### → Serial Master Gateway

Settings for the master gateways

• Active

Activates or deactivates the master gateway

- o Port
  - Port of the master gateways
- o Mode
  - Data or parity mode
- Baud rate
   Sets the baud speed of the serial S-bus
- Start address
  - First S-Bus station on gateway

- End address
  - Last S-Bus station on gateway
- Speed
  - Speed of connection
- → IP
  - For setting the IP address
  - o Active
    - Activates S-bus via IP
  - o PGU

0

- If PGU is activated, the panel can be programmed via this interface.
- Port

Port of the IP connection

### → IP Master Gateway

o Active

For setting the master gateway

- o Timeout
  - Timeout for a expected response, which should be received (Standard  $\rightarrow$  0)
- Start address First S-Bus station on gateway
- End address Last S-Bus station on gateway

### 5.3 Web Connection



This is where you can set the data for the device from which the website is to be loaded and displayed. On programmable pWeb panels, this is usually the internal controller, and so the Local Host IP Address 127.0.0.1 must be set.

### 5.3.1 Connection

Name of the connection

### 5.3.2 Type (no selection for pWeb)

Local	Only for SVGA MB panel
	No connection with any PCD
	Connection is made with the local IP address 127.0.0.1

HTTP Direct Direct connection (ethernet only)

### 5.3.3 Start page

Name of the start page for this connection

### 5.3.4 Remote Host IP

IP address of the connected PCD

### 5.3.5 Remote Port

Remote port (default: 80)

### 5.3.6 Connection List

We advise you to establish one or more connections (up to x16) **from the "List of Connections**".Edit the connection or connections and select the connection which you would like to use for your project. Each connection can be edited at any time.

The names for the connections are required as the URL jump target in the Web Editor:

Examples: the connection in the list is called conn2\_http, and the start page of the project Start.html

🔽 URL Jump	URL	conn2_http/Start.html		
	Frame	self		

### 5.4 System



#### 5.4.1 Production data

Display of the most important production data, such as serial number and ASN

 $\rightarrow$  ASN

SBC product number (order number)

- → Serial number Serial number of the device
- → MAC Address
   MAC address of the device
   → HW Version

Hardware version of the device

- → Production Date Month in which the device was produced
- → Display Type Type of display (internal designation)
- → HW LCD Rotation Rotation of the display

#### 5.4.2 Info

System info, such as Firmware Version, Booter Version, etc.

- → Firmware Version Firmware version currently installed on the panel
- → Booter Version Booter version currently installed on the panel
- M1 Expansion Info Indicates if an M1 memory expansion is present (or a F1xxS module on the pWeb panel)
- → Video Cache Permanent Info: permanent video cache used
- → Erasable Video Cache Info: cache is used for images. Dependent upon the size and number of gif files in the cache

#### 5.4.3 Settings

General settings for the panel

#### → Buzzer

Buzzer which sounds when buttons are operated or certain actions are performed

- Buzzer On/Off
   Buzzer signal when buttons are operated On / Off
  - Buzzer signal when buttons are operated On / Off
- Buzzer frequency
- Pitch of the buzzer
- → File Search Order

Local / remote files

### • No local file search

"No local file search" means files (teq, .gif, etc.) are **not** searched for on the local server of the MB panel.

#### • Local before remote

"Local before remote" means files (.teq,.gif, etc.) are searched for first on the local server, before the PCD server is searched. Files are searched for first in IN-TFLASH/Webpages

#### • Remote before local

"Remote before local" means file (.teq,.gif, etc.) are searched for on the remote server, before the local server on the MB panel is searched.

#### → Start Delay [s]

Start delay for restart (min. 1 sec., max. 15 sec.)

#### → Start screen

Enter the greeting & modify the welcome screen

• Startup text

Freely-definable greeting (max. 64 characters)

- X-position of the text Value between 0 and 639
- **Y-position of the text** Value between 0 and 479
- **Name of the graphic file** gif graphic file: INTFLASH/WEBPAGES/...
- X-position of the graphic
   Value between 0 and 639
   Y-position of the graphic
   Value between 0 and 479

#### → File Cache Active

During normal operation, the file cache should be active. The file cache can be activated and deactivated. Deactivation is used, for example during project handling, because changes to cached files are trackable.

→ Setup Call With Delay Activates or deactivates the delay

#### 5.4.4 Special Settings

Special system settings

#### → Reset All Parameters

This command resets all parameters to the default values

#### → Format Intflash

Extended function with request for confirmation: "Do you really want to format INFLASH?" This command wipes the flash memory and recreates the file system from scratch. After the Formatting OK message, the device returns to the System menu.

#### → Time

Real Time Clock (RTC)

o Time

Real Time Clock (RTC): enter time (container: uBT\_RtcTime)

o Date

RTC: enter date (container: uBT\_RtcDate)

• Time Server Active

Activates/deactivates the time server

#### → Memory

Only in problem cases! Outside of the permissible memory range  $\rightarrow$  Heap 1, 2, 3 and LR.

### → Show Runtime Info

Extended command on the run time

### 5.4.5 Log

Clicking the button scrolls further through the list. This allows you to check, for example, if typefaces are found. The last screen gives info on error messages. Access to log.txt via FTP: uBT\_FS/LOG.TXT

### 5.4.6 Restart

Restarts the system.

### 5.5 **Display**



### 5.5.1 Brightness

Can be adjusted in a range between 0 and 20

#### 5.5.2 Backlight [min]

The touchscreen or buttons are not selected during this period, the backlight is switched off. You can activate it again by touching the screen or a button. Can be adjusted in a range between 0 and 5000.

#### 5.5.3 Rotation

Landscape / Portrait

### 5.5.4 Calibrate Touchscreen

Carefully, using the stylus

### 5.6 Keyboard

0

#### 5.6.1 SIP (Virtual Keyboard)

Activates/deactivates SIP (Soft Input Panel). Virtual Keyboard

#### 5.6.2 Name of the first keyboard

You can choose from: Alphapad.teq (alphanumeric) or keypad.teq (numeric) as the first keyboard to open.

#### 5.6.3 Width of the Focus (in Pixels)

You can select a value from 0 to 6 pixels. A frame identifies the selected area or edit field. The entry defines the frame width in pixels. At a width of 0, no frame is displayed. This is advisable if you are only working with the touchscreen.

### 5.7 Password



You can enter an alphabetic, numeric or alphanumeric password (maximum number of characters = 32, incl. spaces)

You must confirm the password after entering it.

When you enter a new password, you have to confirm it. If the characters entered in the confirmation field do not match the new password, the old password is retained.

If you would like to disable password protection, press the Enter key and confirm without inputting any characters



Forgot your password? →Delete the file inflash/config/passwd.dat (FTP connection). This will resolve your problem.

Ľ								
0:/INTFLASH/CONFIG/*.*								
	Nom	↓Ext.	Taille	Date	Attr.			
	<b>@</b> []		<rép></rép>	00.00.1980 00:00	)			
	🖲 TSPOINTS	DAT	48	01.01.2010 09:12	2-006			
	PASSWD	DAT	64	01.01.2010 09:12	2-006			
l	KEYMAP	DAT	933	01.01.2010 09:12	2-006			

### 5.8 Language



You can select one of the preconfigured languages for the Setup process

## 6 Local files / local server

### 6.1 Connecting via FTP access

The internal structure can only be accessed via FTP: SBC file system (FTP access: user name and password). **ftp:// IP address** 

Nom	↓Ext. Taille
<b>全</b> []	<rép></rép>
🗀 (FILECACHE)	<rép></rép>
🗀 [INTFLASH] 👘	<rép></rép>
🗀 [PLC_SYS]	<rép></rép>
🗀 (UBT_FS)	<rép></rép>
🗀 [WEB]	<rép></rép>

FILE CACHE : Contains the cache memory

**INTFLASH** : Contains:

• INTFLASH/CONFIG/

KEYMAP.DAT → Configure keyboard - only MB with buttons (F-keys). Does not apply to this MB panel. PASSWD.DAT → Only displayed if a password has been creased (Forgot your password? →Delete this file.)

TSPOINTS.DAT → For internal use

- INTFLASH/WEBPAGES → Directory for all project files which you want to save "LOCAL-LY" (teq, gif files, etc.)
- INFLASH/FONT → FONT directory must be created by the user. It contains all the special or additional .bft files containing typefaces.
- INFLASH/TRENDLOGS 
   → TRENDLOGS directory is created automatically when logs are stored. The .CSV files with the logs are saved to this location automatically (this uses Web Editor MB Macro S2F).
- PLC\_SYS→ Internal use, no access (configuration sett., uBT\_containers, etc.)
- UBT\_FS → UBT\_FS/LOG.TXT List of the startup process + Error info (read only)
- WEB→ For internal use
- **SLOFLASH**→ Created automatically when an SD memory card is use with the SD card interface.

### 6.2 INTFLASH/WEBPAGES

Caution: the directory name "M1\_Flash", which is used in the SBC file system on the current QVGA and VGA MB panel, no longer exists on this panel. The directory name of the root level is "INTFLASH"

0:/INTFLASH/*.*				í –		
↑Nom	Ext.	Taille	Date			
金[]		<rép></rép>	00.00.1980 00:00			
CONFIG]		<rép></rép>	01.01.2010 09:12			
[WEBPAGES]		<rép></rép>	01.01.2010 09:12			
hand L	<u> </u>	0.00				
	-	<b>U:7</b>	NTFLASH/WEBPAGES/	-		-
	-	Non	1		↓Ext.	Taille
		<u>ا</u> ک	]	~~	<b>A</b>	<rép></rép>
			xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx	xxxx TEG x.Gli	k.TEK Q F GIF	2

1) Recommended simplest method: Copy all shared files (.teq, .gif, etc.) to INTFLASH/WEBPAGES.

N.B.: If you have copy .teq or .gif files (or even .itq, .csv and .html files) when using a local server, then you must always create at least one .tcr with all the PPO data (Web Builder).

 $\rightarrow$  Caution: Switch the Setup option from "No local file search" to "Local file search before remote"!

 Copy all associated files (.teq + .gif ) to the corresponding subdirectories of INTFLASH/WEBPAGES/. Each associated station has its own subdirectory. The names of the subdirectories correspond to the communication method:

HTTP direct communication  $\rightarrow$  IP address of the station with an underscore instead of a dot

e.g. IP address 192.168.12.90 becomes 192\_168\_12\_90) Copy files to INTFLASH/WEBPAGES/192\_168\_12\_90

0:/INTFLASH/WEBPAGES/192_168_12_90/*.*									
Nom	↓Ext.	Taille							
<b>111</b>		<rép></rép>							
	XXXXXXXXXXXX.T XXXXXXXXXXX.G XXXXXXXXX.HTM XXXXXXX ITO	req IF IL							

 $\parallel \parallel \rightarrow$  File names: max. 24 ASCII characters without spaces, including file extension.

N.B.: If you have copy .teq or .gif files (or even .itq, .csv and .html files) when using a local server, then you must always create at least one .tcr (Web Builder), as it contains all the PPO data. Do not forget to switch the Setup option from "No local file search" to "Local file search before remote".

## 7 Updating and special settings

### 7.1 **Firmware update**

### 7.1.1 Additional information on downloading FW

If problems occur while downloading via a USB connection, try the following solution:

Restart the MB panel with the USB cable REMOVED. Press the Download button and the MB panel's Download mode is activated. Next, connect the USB cable to the MB panel and press Start in the FW Download Service Program

If problems occur while downloading via a USB or ethernet connection, try the following solution:

If communications are interrupted during the download process, no notification appears on screen. This is because the FW flash memory is erased at the start of the process.

### 7.1.2 Safe Firmware Download via USB

#### The safe method for downloading firmware is always via USB.

- a) Switch off the MB panel
- b) At the top of the back cover os a hole of 3mm in diameter. It contains a button. Take a narrow-tipped pen or a small screwdriver (any cylindrical object with a diameter of 3mm is suitable) and use it to hold down the button for short while. You can see the location of the **Reset button** in the figure:



c) Switch on the MB panel with ON at the same time. Wait 3-4 sec. until the LED starts to flash.

Then download the FW using the SBC FW Service Program.

**CAUTION:** The \*.blk file type is used for a complete FW file. Only use files intended for the PCD7.D4xx panel, which were supplied by Saia Burgess Controls.

### 7.2 Reset / Resetting the device to factory settings

In a number of particular cases, the Reset button can be used to fully reset the MB panel and restore the factory default settings.

When could this function be of use?

If, for example, you have copied the local file required for an FTP connection with the local server into the wrong directory or have unintentionally deleted data which is necessary for displaying the Setup menu. The most common error is the appearance of the message "**uBTer-minal not found**", while the content on screen remains unchanged. In such a case, proceed as follows:

- 1) A. Switch off the MB panel with OFF
- 2) Activate the Reset button (see 14.2.1), at the top of the device's rear cover, by holding down the button.

- 3) Switch on the MB panel at the same time.After approx. 5 sec., the buzzer is activated with increasing frequency.
- Once the pitch (or the frequency) of the buzzer has stabilised (after approx. 10 sec.), release the Reset button and wait.
- 5) You may have to wait to 1 to 2 minutes. During this time, the FW is reconstructing the whole organisation of the memory and recreating all the files which are required for the default settings. Finally, the MB panel reboots automatically, and you will be asked to recalibrate the touchscreen. Once you have calibrated it, the system has been fully restored.

### 7.3 Backlight

The period for which the backlight remains on can be set manually. This function helps to save energy. If the backlight is deactivated, you will save approx. 3/4 watts, which is no negligible value. This will also extend the **service life**of the backlight.

### Service life of the backlight

The **normal** service life of the backlight (at 25°C) is defined as approx. 50 Kh. This corresponds to 5 years of continuous use. However, this value is **quickly reduced** (to half or less), if the operating temperature is 10°C or less. It makes sense for the user to take this into account and to adapt the standby period of the backlight accordingly.

### 7.4 Typefaces supported by MB panel PCD7.D4xx

### Default fonts available for the VGA MB panel

	FONT SIZE						
Fronts and formats	10	12	14	16	20	24	36
Arial	x	x		x	x	x	х
Arial Bold			x		x	x	х
Courier New		x		x	x		
Courier New Bold			x		x		
Tahoma		x		x	x	x	
Tahoma Bold			x		x	x	

### Calculating the given amount of play for:

Single text field, multi-line text field, edit field for text field, and button with text.



#### Definitions:

Font size: Character size (font size in pixels)

Y-dimension: Size of the graphical symbol (in pixels)

X-dimension: Width of a character

Text length: Length of a single-line piece of text.

Text field: Length of the painter

<u>General recommendations for text fields (you can find info in the online help for the first ver-</u> sion of Web Editor)

You are recommended to use text fields, which exceed the size displayed in the Editor by up to 20%. To determine the text field length, you can also consult the following table of the min. and max. X-dimension.

General recommendations for the Y-dimension in proportion to the font size and format

Basic rule: the text should be INSIDE the contours.

For buttons and edit fields, a shadow of 2 pixels is added (to the *inside* of the button contours and to the *outside* of the edit fields).

If the text is too large for the edit field, it is overlaid by the border and the 3D shadow.

The following borders must be planned for:

- Single text fields and such with multiple lines: 2 x border width + 1
- Buttons: 2 x border width + 5
- Edit fields 2 x border width + 5

	Font size	ySize	min xSize	max xSize
Arial	36	41	7	36
Arial	24	28	7	24
Arial	20	23	6	20
Arial	16	19	3	16
Arial	12	15	3	12
Arial	10	12	3	10
Arial Bold	36	41	9	35
Arial Bold	24	28	7	23
Arial Bold	20	23	6	20
Arial Bold	14	16	4	15
CourierNew	20	23	12	12
CourierNew	16	19	10	10
CourierNew	12	14	7	7
CourierNew	10	12	6	6
CourierNew Bold	20	23	12	12
CourierNew Bold	14	17	8	8
Tahoma	24	29	5	24
Tahoma	20	25	4	20
Tahoma	16	20	4	16
Tahoma	12	15	4	12
Tahoma	10	13	3	10
Tahoma Bold	24	29	7	29
Tahoma Bold	20	25	6	24
Tahoma Bold	14	17	4	17

### 7.5 Special Unicode fonts

#### 7.5.1 General information

The user can add additional fonts, for example, which are required for some languages or special fonts/formats/sizes, which are not provided for by default on the MB panel.

Such languages include: Russian, Greek, Chinese, Japanese, Korean

Such fonts include: Comic sans MS, Charleworth, Book Antica, Century, Trebuchet, Verdana

Different sizes, such as 10,12,14, etc., or formats such as plain (or normal), bold, etc., can be used on all these fonts.

<u>Fonts and Unicode fonts:http://www.sbc-support.ch</u>  $\rightarrow$  Product Info  $\rightarrow$  HMI  $\rightarrow$  Web-Panel PCD7.D4xxx  $\rightarrow$  Additional information for Sales Companies (restricted Area)

Files containing typefaces for specific languages or fonts/formats/sizes, which are not in the list, can also be installed on an MB panel. If you want to do so, please contact SBC Support.

To ensure that all characters are supported, we recommended using the Arial typeface. This is particularly the case for languages with a large number of characters, such as Chinese.

This means using Unicode files with typefaces (.bft) generated and made available by Saia Burgess Controls. The firmware searches the following locations for typefaces:

INTFLASH/FONT

A file with typefaces contains the data for a continuous string of characters. If, for example, Greek and Cyrillic are required, two files must be loaded: one with the Greek alphabet and another containing the Cyrillic characters.

The size of such a font file must not exceed 128 KByes.

(Chinese requires many files with different font sizes to cover all the characters.)

If a font file is found, it is registered. A maximum of 65 different files can be registered. When a character is required, the front file is opened and the data for the characters is called up. The data is intended for subsequent use.

0:/INTFLASH/*.*				
Nom	↓Ext. Taille	1		
全[]	<rép></rép>			
CONFIG]	<rép></rép>	0:/INTFLASH/FONT/*.*		
(FONT)	<rép></rép>	Nom	↓Ext.	Taille
[WEBPAGES]		<b>•</b> []		<rép></rép>
		TAHOMA_EXT_B10	BFT	8'392
		COURIER_NEW_E_P10	BFT	7'080
		ARIAL_GREEK_B14	BFT	5'300
		ARIAL_EXTENDED_P20	BFT	17'724
		ARIAL_CYR_P48	BFT	80'912
		ARIAL_CYR_P36	BFT	48'668
		ARIAL_CYR_P26	BFT	27'848
		Lun	~~~~	~~~~~

- → Name of the font files: max. 24 ASCII characters without spaces (including file extension)
- → To install font files: copy the files to the FTP server of the MB panel via an FTP connection.
- → Chinese fonts: 12 is the smallest legible font size.

#### 7.5.2 Multi-languages: Example

Switch to a different language with the button (set the variable with the mouse button held → down).

Examples: Translate "Happy Birthday" to Czech using the "HTML TAG" type.

The Czech requires an expansion of the European characters, which can be downloaded by logging into the SBC Support site.

Procedure:

- The Unicode font .bft file(s) with expanded European character set must be copied into INTFLASH /FONT (see section 13.1).
- Web Editor: create the static text "Happy Birthday" and select "HTML TAG" as the source • type.
- Under the "Text Positions Advanced" tab for position settings: if you are using exotic cha-• racters (such as Katakana, Chinese, etc.), we recommend sticking with the default settings for the text position (not centred or justified)
- In some typefaces, it is not possible to represent all Unicode characters. We recommend using the "Arial Unicode MS" or "MS Sans Serif" typefaces, as they are well suited to use with Unicode characters.

<b>S</b> 5_unicode2.teq				
•		· · · · · · · · · · · · · · · · · · ·		
-Happy Bi	rthday	· · · · · · · · · · · · · · · · · · ·		· · · · · · · · · · · · · · ·
Static Text		-		
General Repaints H	ide and Disable Painte	er Border Advanced	Text Positions Adva	inced
Edit a Source				
Edit a Source	Type: HTML TA	٨G		•
Name:	Happy Birthday			•

Do not edit the CSV file in the S-Web Editor directly, because the text window of the S-Web Editor will save the CSV file in ASCII mode. You could, for example, use Notepad to edit your CSV files (or another text editor, which allows you to save the files in Unicode format). In the Notepad "Save As" dialog box, you can select the "Unicode" entry in the dropdown menu under "Encoding". In MS Excel, use the format "Unicode Text".

Once you have saved your CSV files in the Unicode format and selected a typeface in the HMI which can be used to display Unicode characters, then the Unicode strings should be displayed properly. If you want to use Unicode, you do not need to make any further settings in the S-Web Editor.

	📕 DE_DE	UTSCHLAN	D.TXT -	- Notepad					
	File Edit	Format	View	Help					
	Нарру	Birthda	ay;Al	les Gu	te	zum	Geburts	stag	
📕 CZ_TSCHEC	HIEN.TXT -	Notepad							
File Edit For	nat View	/ Help							
Happy Birt	hday; 1	všechno	nej	lepši					

4) Web Editor: Create a button with the following action parameters "Actions Set Variables":

The type is the "Container", the name is "@LANGUAGE" and then the Unicode .csv file.

S_5_unicode2.teq								
Нарру	Birthday							
CZ - Tsc	hechien							
Button								
Hide and	Disable Painter	Border Advanced						
General	Repaints	Actions Set Variables						
Set Var on Mo	Set Var on Mouse DOWN							
Name:	@LANGUAGE							
Value :	CZ_Tschechien.csv							

We recommend copying the .csv files into the local server of the MicroBrowser panel, under INTFLASH/ Webpages/...

→ For information on the topic of multilingual displays, see also "Multilingual HMIs" in the online help of the Web Editor.

#### 7.5.3 Analysing incorrect fonts, font sizes or format templates

- 1 Arial, same format, **keep** size
- 2 Arial, simple, **keep** size

If the size is not available for Arial:

3 Same typeface, same format, reduce size to next possible size

4 Same typeface, simple, reduce size to next possible size

If there is no smaller typeset for this typeface:

- 5 Arial, same format, reduce size to next possible size
- 6 Arial, simple, reduce size to next possible size

If there is no smaller typeset for Arial:

7 Arial, same format or simple, use the smallest available font size

If you replace a typeset, then this is logged in the log file (see section 7.3.4)

#### 7.5.4 Web Editor

Unicode character sets are available:

- using the source type "HTML TAG" in the Web Editor and with a .CSV file.
- by entering the text directly into the Web Editor as a string. In this case, no .CSV files are necessary. Do not import any Web Editor projects, which have been created with Microsoft Windows, using Unicode Character Set A, into another Windows project, which was created with Unicode Character Set B.

#### 7.6 Internal special functions

#### 7.6.1 Container variable for SVGA MB panel

The configuration file UBTERMINAL.TXT is **not** accessible via the FTP connection, because this file is located in the (write-protected) subdirectory / PLC\_SYS/CONFIG/.

Containers allow the application to exchange data with the firmware. All container variables have the prefix "uBT\_". Pay attention to upper/lower case!!!

Config file entry	Container (source HN 10.03.10)	Туре	Default	Min value Min length	Max value Max length	Description
R/W	uBT_AlarmFrequency	Decimal value string	1000	125	8000	Frequency setting for the acoustic alarm (Hz) (based on 125,250,500,1000,2000,4000,8000) Set before using the alarm. A change in frequency while the alarm is sounding will only take effect when the next alarm is called.
No	uBT_AlarmStart	Decimal value string	0	0	30000= 30 sec.	Define a value to start or stop the pulsed, acoustic alarm. The acoustic alarm can be started by setting an interval time (0 - 30,000 mSec) for the pulsed signal. A 50% pulse/pause ratio is used, i.e. the pulse time is equal to the pause time. Changes made while the alarm is already sounding are ignored. At a setting of 0, however, the alarm is immediately deactivated. The alarm is stopped immediately by touching the screen.
R/W	uBT_AlarmVolume	Decimal value string	10	0	20: 100%	Volume of the acoustic alarm (0 - 20). As pulse width modulation is used, this setting has an effect on the perceived pitch of the alarm. Set before using the alarm! A change in volume while the alarm is sounding will only take effect when the next alarm is called.
R/W	uBT_AutoRepeat	Boolean value string	0	0	1	Via the Soft Input Panel SIP (on-screen keyboard), use: SIP keyboard: AutoRepeat on (1), off (0)
No	uBT_BackLight	Boolean value string	1	0	1	Read/Write 1, 0 → Remote control for backlight OFF. The backlight is switched OFF if the value was previously '1'. When the screen is touched, the backlight is switched back on again immediately. Read/Write 0, 1 → Remote control for backlight ON. The backlight is switched ON if the value was previously '0'. There may be a delay when switching off. Remote control via PPO <-> Container coupling only. Use on painters for buttons and edit fields is not supported.
No	uBT_BackLightOn	Boolean value string	1	0	1	Direct operation of the backlight by making an entry in this container (1: On, 0 : Off). Status of the backlight is set to read back. Container is set by activating the back- light by touching the screen and reset after switch off with uBT_BackLightTimeout. Areas of application: remote monitoring and remote control via PPO <-> Contain- er coupling, local user control right on the terminal via the painter for buttons (mouse button pressed, mouse button released) and locally via the painter for edit fields in the web project.

Config file entry	Container (source HN 10.03.10)	Туре	Default	Min value Min length	Max value Max length	Description
R/W	uBT_BackLightTimeout	Decimal value string	15	0	5000	Time (min) until backlight switches off. When the screen is touched or switched on by the container, the backlight is switched on and the countdown begins. If value=0: no time-delayed monitoring of the backlight. In this case, the backlight remains permanently switched on.
Read only	uBT_BooterVersion	ANSI text string	Current version string	0	8	Firmware booter version String read only
R/W	uBT_BuzzFreq	ANSI text string	1000	125	8000	Frequency settings of the acoustic signal from touching (125,250,500,1000,2000,4000,8000) If using the touch function to define the pitch of the acoustic signal when touching the screen.
R/W	uBT_BuzzOnOff	Boolean value string	1 (On)	0	1	Acoustic signal from touching On (1)/Off (0)
R/W	uBT_BuzzVol	Decimal list string	1	0	20: 100%	Read/write volume of the buzzer (0 - 20). When using the touch function, this defines the volume of the acoustic signal when touching the screen. Using pulse width modulation, this setting changes the perceived pitch of the alarm. Switch off by setting the volume to 0.
Read only	uBT_ConfigType	ANSI text string	Curr. config. type	0	24	Configuration type String read only
R/W	uBT_DefaultGateway	String IP address	0x00 00 00 00	*	*	Read/write IP address of the gateway on the subnet being used (forced position, overwrites default). * Setting is 0: forced position deactivated. If the setting=0: depending upon the router you are using, it may not be possible to reach external addresses outside of the subnet. If this setting is changes, a restart is necessary. This will mean FTP connections are lost.
No	uBT_DispResolution	ANSI text string	<screen width&gt; <screen height&gt; <color depth&gt;</color </screen </screen 	0	16	Info on resolution String read only
Yes	uBT_DisplayRotation	UTF8 1) !!! Text string	0° (0x30 C2 B0)	0°	270°	Rotation 0°,90°,180°,270° If a change is made, a restart will be necessary. This will mean FTP connections are lost. III 1) Direct display of UTF8 may not be supported by the FTP client. The screen is displayed rotated, meaning that it may not be fully visible, even with automatic scaling. When the upscaling function is activated, the scaling of the non-rotating screen remains consistent with the rotating screen. Calibration of the rotating screen is the same as on the non-rotating screen. In order to alter the calibration, please return to the non-rotating screen.

Config file entry	Container (source HN 10.03.10)	Туре	Default	Min value Min length	Max value Max length	Description
R/W	uBT_EnableCache	Boolean value string	1 (activa- ted)	0	1	The file cache is used (1), 0 no file cache for all visualisation files, which are not images. Files are cached for the first time as soon as they are used. Regardless of the local file settings, files are searched for first in the cache memory. The cache memory is wiped upon startup and URL jumps. Image files are decompressed and cached in a separate, always activated video cache. This video cache is wiped upon startup, URL jumps and whenever too much data has been loaded. When this occurs, all necessary files are reloaded and decom- pressed.
R/W	uBT_EnableSIP	Boolean value string	1 (activa- ted)	0	1	Read/write SIP $\rightarrow$ Select the Soft Input Panel (virtual keyboard) Write 0 $\rightarrow$ SIP is deactivated. Virtual keyboards are deactivated Write 1 $\rightarrow$ SIP is activated. Virtual keyboards (alphapad.teq and keypad.teq) are activated.
No	uBT_FlashStatus	Decimal value string	0	0	255	INTFLASH Status20: Device present, no file system 21: Device present, file system OK 22: Device present, error during creation of file system 23: Device present, creation of file system in progress 24: Device present, compression of flash sector in progress -1: Unknown error
R/W	uBT_FocusBorderWidt h	Decimal value string	2	0	5	When the painter for edit fields and buttons is displayed, a rectangular focus frame indicates that it is activated. This setting is used for the line thickness (in pixels) of the focus frame: 1-5 0: Focus frame is switched off.
R/W	uBT_InactivityPollTime	ANSI text string	0	0	5	Setting for touchscreen / keyboard inactivity (1), switched off at 0. To switch to a less frequent touch- screen/keyboard call.
No	uBT_IntFlashStatus	Decimal value string	0	0	255	Status of the internal flash memory 20: Device present, no file system 21: Device present, file system OK 22: Device present, error during creation of file system 23: Device present, creation of file system in progress 24: Device present, compression of flash sector in progress -1: Unknown error
R/W	uBT_IntroGraphicName	ANSI text string	SBCSU Grande. gif	0	20	Intro graphic
R/W	uBT_IntroGraphicXPos	Decimal value string	100	0	639	Position of the intro graphic (horizontal position, from the left)
R/W	uBT_IntroGraphicYPos	Decimal value string	50	0	479	Position of the intro graphic (vertical position, from the top down)

Config file entry	Container (source HN 10.03.10)	Туре	Default	Min value Min length	Max value Max length	Description
R/W	uBT_IntroText	ANSI text string	Welcome	0	32	Startup text
R/W	uBT_IntroTextXPos	Decimal value string	350	0	639	Position of the startup text (horizontal position, from the left)
R/W	uBT_IntroTextYPos	Decimal value string	300	0	479	Position of the startup text (vertical position, from the top down)
R/W	uBT_TCPIPAddr	String IP address	0xC0 A8 0C 5A: 192.168 12.90	*	*	Read/write the TCP/IP address of the terminal (own address) within the subnet being used.* If the setting is changed, a restart is required. This will mean FTP connections are lost.
No	uBT_IsTSPresent	Decimal value string	Current value	0	255	Touchscreen was detected (1). If the value is 0, calibration will be skipped during startup.
R/W	uBT_LcdContrast	Decimal value string	10	0	20: 100%	Contrast and brightness setting for the backlight (0:20). Increasing the value means greater brightness.
R/W	uBT_LocalFileSearch	Decimal list string	Local before remote (1)	0	2	Search mode for local file search 0: Do not search local files 1: Search local files before remote files 2: Search remote files before local files
No	uBT_MACAddr	ANSI text string		0	20	Own MAC address (read only)
No	uBT_MultiKeyValue	ANSI-Text- String	0	0	1	Container is not available External SIP keyboard multikey display (1). At 0: multikey combinations not activated
R/W	uBT_SbusAddr	Decimal value string	10	0	253	Own S-bus address
R/W	uBT_ ScaleMode	Decimal list string	Auto (0)	0	2	Setting for upscaling mode Auto (0): Smaller views are automatically adapted to the size of the terminal screen, one view at a time. QVGA views are enlarged to the full screen size of VGA terminals (2x horizontal and vertical zoom with pixel doubling). VGA (1): Forced position for VGA without upscaling of smaller views. This is why upscaling is switched off on VGA termin- als. QVGA (2): Force upscaling with pixel doubling on VGA terminals. The setting takes effect on the next view jump, URL jump, or after a restart.
Read only	uBT_SerialNumber	Hex. or dec.		0	8	Serial number (read only)
No	uBT_Setup	Text	-	-	-	Enter "show" (pay attention to up- per/lowercase). A pop-up window opens on the terminal containing the Setup menu.
R/W	uBT_SubNetMask	String IP address	0xFF FF FF 00	*	*	Read/write subnet mask of the subnet used by the terminal. * If a change is made, a restart will be necessary. This will mean FTP connections are lost.
Read only	uBT_Version	ANSI text string	Current version string	0	32	Firmware version String read only

Config file entry	Container (source HN 10.03.10)	Туре	Default	Min value Min length	Max value Max length	Description
R/W	uBT_RtcDate	ANSI text string				The date is obtained from the real time clock on the MB panel. (Real Time Clock (RTC) must be activated in the Setup menu)
R/W	uBT_RtcTime	ANSI text string				The time is obtained from the real time clock on the MB panel. (Real Time Clock (RTC) must be activated in the Setup menu)

\*: In general, IPv4 private addresses are used. The default settings are:

- 1 x A class with subnet mask 10.x.x.x and mask 255.0.0.0 – sections can also be used

- 16 x B class with subnet mask 172.16.x.x to 172.31.x.x and mask 255.255.0.0 – sections or combinations can also be used

- Or 256 x C class with subnet mask 192.168.0.x to 192.168.255.x and mask 255.255.255.0 - combinations can also be used

#### 7.6.2 uBT\_BackLight Containerdiagramm



t out = backlight timeout

#### 7.6.3 Additional uBTerminal container for "Save logs to File" function

Name of the container	Default	Meaning	Access
uBT_TrendPath		Dynamically chained file path	Read only
uBT_TrendDevice	INFLASH:	Power-saving device	Read only
uBT_TrendDir	WEBPAGES/ TRENDLOGS	Subdirectory for storing all trends.	Read
uBT_TrendSDFlash	0	0: INTFLASH (SVGA) 1: SL0FLASH* (*not on this MB panel)	Read/Write
uBT_TrendPrefix	TR	File name prefix, max. 5 characters	Read/Write
uBT_TrendSave		Last-saved file	Read only
uBT_TrendLoad		File currently loaded	Read/Write
uBT_TrendSelect	Last file in the directory	File currently selected. When saving a trend, the value is set with the saved file name.	Read/Write
uBT_TrendOldest	Change to the	Select oldest file	Write only
uBT_TrendNewest	uBT_TrendSelec	Select newest file	Write only
uBT_TrendPrev	t container.	Select previous file	Write only
uBT_TrendNext	Used for button actions.	Select next file	Write only
uBT_TrendDelAll	Use for button	Delete all files in the directory	Write only
uBT_TrendDelSel	actions.	Delete currently selected file	Write only
uBT_TrendDelLast		Delete last-saved file	Write only
uBT_TrendDelOld		Delete all files which are older than the selected file.	Write only

→ Based on the example of the online minimum S2F macros for the MB panel "MB\_OnlineTrendMinimal\_5\_13\_01.esm" See section xxx

## 7.7 List of message box messages

Messages	Comments
Out of memory in Ramdisk	Can be displayed if a file (generally a .gif) is too large. VGA MB panel: < 256 Kb (see also section 18)
	Language
Failed to parse .csv	No memory available for parsing a .csv file
LR: out of memory! or out of memory for language resource	No memory available for parsing a .csv file Or the total amount of memory needed is > 512 kbytes (see also section 18)
Failed to initialize LR heap!	The memory for the .csv file is initialised each time a file is parsed. This message means that the process has failed.

Memory				
Failed to initialize heap 1	The painter objects and the list of current PPOs are assigned to heap 1. This heap is deleted after each .teq jump.			
Out of memory in heap 1	Total amount of memory used by the painters is > 1536 Kbytes (see section 18)			
Failed to initialize heap 2	Container variable, HTML tags, TCR table + Source & object display of online trends are stored in heap 2. This heap is initialised at each URL jump.			
Out of memory in heap 2	The total amount of memory used by HTML tags and container variables is > 1024 Kbytes. The most likely cause of this message is there being too many active offline trends. $\rightarrow$ Can be displayed for online and offline trends.			
Out of memory in heap 3	$\rightarrow$ Usually displayed due to there being too many data points. Offline trend, alarm events, HD log and online trend are stored in heap			
	Total amount of memory used by offline trend data and HD log is > 1280 kbytes (see section 13) Before using trends, you must first calculate the amount of memory required.			
	<u>Online trends:</u> If update period of process points (Web Editor parameters) = < 1000 milliseconds $\rightarrow$ (storage time in sec.) x (total number of trends) x (size of a data point $\rightarrow$ 28 Bytes) Example: 4200 sec. x 4 trends x 28 Bytes = 470 Kbytes <u>Offline trends</u> : - Macros of offline trends (with or without "save to file" function). Avoid freezing the trend lines, by pressing the Clear button in the macro upon receiving the message "out of memory in heap 3", in order to assign space in the memory to heap 3. You can then load the next files.			
	Object			
Maximum number of object reached!	Maximum number of objects (e.g. buttons, rectangles, etc.) in a teg			
	view was exceeded. <u>Maximum objects = <math>512 \rightarrow</math></u> See definition of an object in section 17.			
	PPO			
OrderValues on remote host has failed !	Request for the list of current PPOs from the remote host has failed.			
ReadFile on remote host has failed !	Regular polling of the PPO has failed.			
	Communication			
buffer OVF in Spider_fileReadIn()!	When loading the file, more data was received that the buffer is able to accept.			
Range is null!	Range of a bar diagram was incorrectly calculated.			
TCR				
value out of range !	The min/max limits of a TCR value were exceeded.			
value out of default range !	Invalid value for a TCR, e.g. "aa" for time.			
TEQ				
Reading UTF string failed;	The end of the file was probably reached while a string was being read.			
	Painter			

## 8 Handling: precautionary measures

### 8.1 Glass touchscreen

Since the touchscreen is pressure-resistant, you can perform actions by pushing on the screen with your finger or a stylus. Please do not use sharp-tipped pens, which could leave behind lasting damage on the touchscreen, under any circumstances.

The pressure required to activate the display is predefined, and cannot be modified. When the touchscreen (or any button on a membrane keypad) is pressed, a short buzzer (button tone) is triggered, as long as the volume is not set to 0.

Never hit the touchscreen with force, as the two touchscreen layers are reinforced by a layer of glass, which could be shattered by doing so.

### 8.2 Information on the LCDs of the MB panel display

The fluid in the LCD display contains an irritant. Should this fluid come into contact with your skin, rinse the area affected under running water for at least 15 minutes.

Should fluid from the LCD display get into your eyes, rinse out your eyes under running water for at least 15 minutes and seek medical attention.

#### Features of the LCD display

The colours and brightness of the individual MB panel displays are individual characteristics, and may differ slightly from one display to the next.

### 8.3 Care

These display terminals have been developed for maintenance-free continuous operation.

Recommendations for cleaning the surface of the MB panel.

Scouring cleaning agents and/or cleaning equipment which could damage or scratch the surface of the MB panel must be avoided!

Apply denatured alcohol to a clean, soft cloth.

Finish by wiping it down with clean water and a clean, soft cloth (recommended)

During cleaning, make sure that no liquids of any kind are allowed to penetrate inside the panel. Resistant to chemical substances according to DIN 42 115:

## 9 General recommendations for the Web Editor

### 9.1 In the "Project configurations"

→ Select a standard typeface, which is to be used for most projects!

### 9.2 In the Web Editor project (general information)

- You are recommended to use text fields, which exceed the size displayed in the Editor by up to 20%. You can find details in section 12.
- IMasterSBC5\_xx\_xx.jar is not required in order to display a website on the MB panel.
- The .tcr file is the only file which needs to be integrated into the Web Server project (.wsp). All other project files can be copied into the flash memory (PLC or local server of the MB panel) under INFLASH/webpages/.
- Add Unicode fonts → Consult: http://www.sbc-support.ch→ Product Info → HMI → Web-Panel PCD7.D4xxx → Additional information for Sales Companies (restricted area)
- If the correct typeface is not in the list → please contact PCD Support in Murten, where we would be happy to help.
- The container offset name (container name) must not contain any underscores or @ signs.
- (i.e. not: PDP-ADDRESS+@COFF\_containername@,PDP-FORMAT)
- Consider that the suffix for container offset is ,d for a decimal and ,k for the format HH:MM
- Use "Online trends macros" with the right timestamp: The time server must be activated in the Setup menu.
- For information on calculating the amount of memory required, see section 18 and 7.3.3.2.
- Viewing angle: the surface (front panel of the unit) projects a few millimetres over the display. You should therefore leave a frame of 4-5 pixels free (black) around the view
- PPOs: → Number of objects per page: tested with 1024 objects (1024 objects with 3 flags per object = 3072 flags)
- PPOs: → Number of registers per page: tested with 475 registers
- Maximum number of objects (painters) per page is 512 objects
- Project configuration → Scaleable HTML: define HTMLs, where the HMI is adjusted during the run time by a defined factor. For example, scale your HMI to 200%, without having to modify the TEQ views. MicroBrowser adapts the TEQ views during run time, if you enter your new 'scaleable' HTML file instead of the standard HTML file.
   Examples: Factor 2.000000 means 200% of 640x480, i.e. 1280x960; a factor < 1 (< 100%) is not suitable for applications with the MB panel.</li>

### 9.3 Definition of an object in the Web Editor

• An object is a static text component, a multi-line label, a line, a rectangle, an ellipse, a polygon, an edit field, a button or a bar chart. Macros contain many objects (an offline trend contains 44 objects).

- Touchscreen: The base material of the touchscreen is glass. For this reason, you should therefore not touch the screen with a screwdriver or hard objects, which could damage the screen. Only use a finger or special input styli for operation.
- In addition: use the right tool for a hardware reset (section 16.2.1). Do not use a paperclip or pin, but rather push the microswitch carefully with a ⊙3mm drill bit.

### 9.5 Some rules regarding gif images

- The three timestamps on the MB panel's graphical display are:
  - Repaint video cache
  - Decompression in the video cache in case of URL jump and after startup (almost linear with the number of pixels). See section 7.3.1.
  - o File transfer time via the link, if not local
- If the total size of the gif files is the same, 1 large image (max 512 Kbytes) is better than 2 smaller ones.

Recommended max. size 798x 598 pixels (one pixel remains free all-around)

• It is better to use the same image multiple times in the same project, because it then only has to be transferred once, decompressed and stored in the video cache. Place it, for example, in the teq file for the general background.

### 9.5.1 Decompression in the video cache at startup using the Gif list

This solution allows gif files to be decompressed in the video cache in the background.

Advantage: You do not have to wait for decompression to finish until the first page can be displayed.

The first page is displayed immediately (as with a project with no gif list) and you do not have to wait until all gif files in the gif list have been decompressed. Decompression continues in the backgrounduntil the video memory is full (if there are multiple gif files in the gif list). See section 19.6

Operation of:

- Open Microsoft<sup>®</sup>Notepad" Editor
- Write the following header text for the file:

[PATH]

INTFLASH:/WebPages

[FILE]

- Enter the name of all gif files (as listed in the local directory INTFLASH/WebPages.
- Save the file under the name "GifList.txt".

Example of a GifList.txt

Гратиј	•
	_
LINTFLASH./WEDFages	
A_SETTINGS.GIF	
A_WATER_IA.GIF	
B_ALARM.GIF	
B ALARM A.GIF	
B BACK.GIF	
B CLIMATE A GIE	
B CLIMATE A DE GIE	
D_CLIMATE_A_DE.GIP	
D_CLIMATE_A_EN.GIF	
D_CLIMATE_A_FR.GIF	
B_CLIMATE_DE.GIF	
B_CLIMATE_EN.GIF	
B_CLIMATE_FR.GIF	
B_CLIMATE_IA.GIF	
B_CLIMATE_IA_DE.GIF	
B CLIMATE IA EN.GIE	
B CLIMATE TA ER GIE	
B CLIMATE TA TT GIE	
B CLIMATE IT GIE	
D_CLIMATE_IT.GIF	
B_CLUCK.GIF	
B_ELECIKU_A.GIF	-

- Copy of the GifList.txt under INTFLASH/Config/

0:/INTFLASH/CONFI	G/*.*		
Nom	↓Ext.	Taille	
金[]		<rép></rép>	
📳 GIFLIST	TXT	178	
📕 TSPOINTS	DAT	48	
🖲 KEYMAP	DAT	933	

- For checking in LOG.TXT (UBT\_FS/LOG.TXT)

📕 Untitled - Notepad						
File	Edit	Form	at View	Help		
0×0 0×0 0×0 0×0 0×0	0004 0004 0004 0004 0004 0004	686 68C 690 694 881	Start [PATH] INTFLA [FILE] Stop F	Proces: SH:/Wel Process	s Gif bPages Gif	

#### 9.5.2 Decompression of Gif files in the video cache at startup using a dummy start screen

→ Place all the gifs in a teq start screen, which will serve as a placeholder.

This solution allows you to decompress gif files in the video cache before the real first page of the project is displayed.

Advantage: Decompression is already finished when the first page of the project is displayed.

Disadvantage: You have to wait for compression to finish, before the first page is displayed.

Tip: Create a dummy page with:

...a messages such as "Images loading, please wait." ...the ViewJump\_onTimeout macro to jump to the correct first page of the project

#### 9.5.3 Decompression of Gif files: analysis/calculation

Available for the solutions from sections xxx and xxx

How do you analyse the number of gifs in the video cache, based on the number of pixels in the gif images? The video cache has a total size (permanent and flushable) of 16 MByte. Of this, 4 to 6 Mbyte are used for the permanent cache. The remaining ~ 10 -12 Mbyte are available.

Example calculation of the number of images in the 4 Mbyte permanent video cache

<u>Example 1:</u> The number of pixels in the images is  $640 \times 480$  pixels (the whole screen)  $000\ 000$  Byte /  $(640 \times 480)$ x2 = 19, meaning that the cache can hold max. 19 gif files

Example 2: The number of pixels in the images is ~ 120 x 120 pixels 12 000 000 Byte /  $(120 \times 120)x2 = 19$ , meaning that the cache can hold max. 400 gif files

Note: The ratio between the size of the gif files and the number of pixels is not a constant

### 9.6 Expanded error messages for the SVGA panel

<u>Other:</u> The following messages \* can be displayed, if the amount of memory required by the gif files, painters, HTML tags, container variables, online /offline trends, HD logs and language resources (.csv files) is too large. In this case, some parameters must be adjusted, by modifying their values directly in the Setup menu (see section 7.3.3.2)! After making modifications, the panel must be restarted.

Recommendations:

We do not recommend setting the maximum value immediately, but rather first trying a moderate value, as problems could occur and performance is substantially reduced by setting all the memory values to their maximum value.

Error messages *	Default values	Moderate values	Maximum values
- out of memory in ramdisk	512 kbytes	640 kbytes	1024 kbytes
- out of memory in heap 1	1536 kbytes	1792 kbytes	2048 kbytes
- out of memory in heap 2	1024 kbytes	2048 kbytes	4096 kbytes
- out of memory in heap 3	1280 kbytes	2048 kbytes	4096 kbytes
- out of memory for lan- guage resource (or LR: out of memory)	512 kbytes	768 kbytes	1024 kbytes

### 9.7 Extended alarm macros

### 9.8 Trend macros for MB panels with "save logs to files"

The Web Editor macro library does not contain any special trend macros with S2F (save to files) for MicroBrowser panels\*. These macros must for the moment be downloaded on the Support screen, and will only be integrated in the next version of PG5.

- - These trend macros are 100% based on the default trend macros (minimum and complete) with some additional edit fields and buttons (container variables), which allow for display and management functionality, and if necessary for the deletion of csv files.
- - The names of the macros are identical to the default macros and have the prefix "MB\_"
- The online and offline trend logos can be saved as a "CSV format file" on the MB panel itself, and be played back there. These .CSV files can be read as text via FTP access, and are stored on the MB panel in a subdirectory of INTFLASH/ WEBPAGES/ "TRENDLOGS" (or optionally on the SD memory card).
- - The name of the CSV file is created automatically up to a prefix of max. 5 characters. The name contains the full date when the file was created: Day, Month, Day and Hour/Minute/Second.

Examples: TR\_20110713081305.CSV (TR\_is the prefix)

### Web Editor

After downloading the macro, create two subdirectories and copy them. MacroLib/SBCTrendMacro/**MB\_ trend macros with S2F** MacroLib/SBCHDLogTrendMacro/**MB\_ HDlog macros with S2F** 

#### → MacroLib /SBCTrendMacro/MB\_ trend macros with S2F

The applies to "Online Trends", "Offline Trends" (DBs) and "Offline Saved Trends", which allow you to play back all of the stored files.

MB_OnlineTrendComplete_S2F_5_13_01	esm
MB_OfflineTrendMinimal_S2F_5_13_01	esm
MB_OfflineTrendComplete_S2F_5_13_01	esm
MB_OfflineSavedTrendMinimal_S2F_5_13_01	esm
MB_OfflineSavedTrendComplete_S2F_5_13_01	esm

#### → MacroLib/SBCHDLogTrendMacro / MB\_ HDlog macros with S2F

This applies to "Remote Offline Saved Trends" (HDlog macros)

BB_RemoteOffSavedTrdMini_S2F_5_14_25	esm
MB_RemoteOffSavedTrdComplete_S2F_5_14_25	esm

Section 11 shows a list of the containers, which are required by the individual MB\_Trends.

MB panels  $\rightarrow$  Example of teq trend view with "MB\_OnlineTrendMinimal\_S2F\_5\_13\_01.esm"



Α

В

Standard Online Trend Minimal macro

Additional buttons and edit fields for: displaying saved file names, list of saved file as well as navigating within the list if .CSV files.

1)	Delete selected File	Delete the selected file (6)
2)	Delete All Older files	Delete files which are older than the selected file.
3)	Delete All files	Delete all saved files
4)	Delete the last Saved File	Delete the last saved file.
5)	Saved Trend	Full name of the last saved file
6)	Selected Trend	Newest file in the directory. Navigate through the list of saved files, using the buttons, and select one of them.
7)	<<<>>>	Navigate through the list of files with the same prefix
8)	Prefix name	Free characters, which are available as a prefix (max. 5 cha- racters).Do not modify the prefix name between the login processes. Such carelessness can cause problems. The name is used to identify a group of .CSV files.
9)	Loaded Trend	Not in the online trend, but only with the MB_OfflineSavedTrend macros Name of the selected and loaded file

**Important information:** Depending upon the application, many buttons or edit fields may be unnecessary.

Procedure: Remove the edit fields for macro and delete buttons, which cannot be used, from the group. Regroup the fields.

Example: The edit field given the prefix in its name can be removed, without impacting upon the trend function.

You can also reorganise the macro: increase button size. The position of the date and time (X-acis) must not be changed (inverted).

#### **FTP** access

By selecting FTP access, you can display and read the list of .CSV files.

In INTFLASH/TRENDLOGS/

0:/INTFLASH/WEBPAGES/TRENDLOGS/*.*				
Nom	↑Ext.	Taille	Date	Attr.
<b>1</b>		<rép></rép>	00.00.1980 00:0	0
TR_20110713164604	CSV	1'026	01.01.2011 09:1	2-006
TR_20110713164628	CSV	2'447	01.01.2011 09:1	2-006
TR_20110713164734	CSV	1'149	01.01.2011 09:1	2-006
TR_20110713164800	CSV	1'249	01.01.2011 09:1	2-006
TR_20110713164829	CSV	1'444	01.01.2011 09:1	2-006
TR_20110713164918	CSV	1'071	01.01.2011 09:1	2-006

# A Appendix

### A.1 Symbols

This symbol refers the reader to additional information, either in this manual, in another manual, or in technical documents on this topic. There are no direct references to such documents.



This symbol indicates instructions which must be followed strictly.

### A.2 Address of Saia Burgess Controls

Saia-Burgess Controls AG Bahnhofstrasse 18 CH-3280 Murten Switzerland

SBC on the web: www.saia-pcd.com

Support-site: www.sbc-support.com